



During installations of SnapNrack solar mounting solutions on presidential composition shingles, proper flashing placement is critical to minimize leaks. In this technical bulletin, we provide the steps necessary to ensure proper placement of flashings on presidential composition.

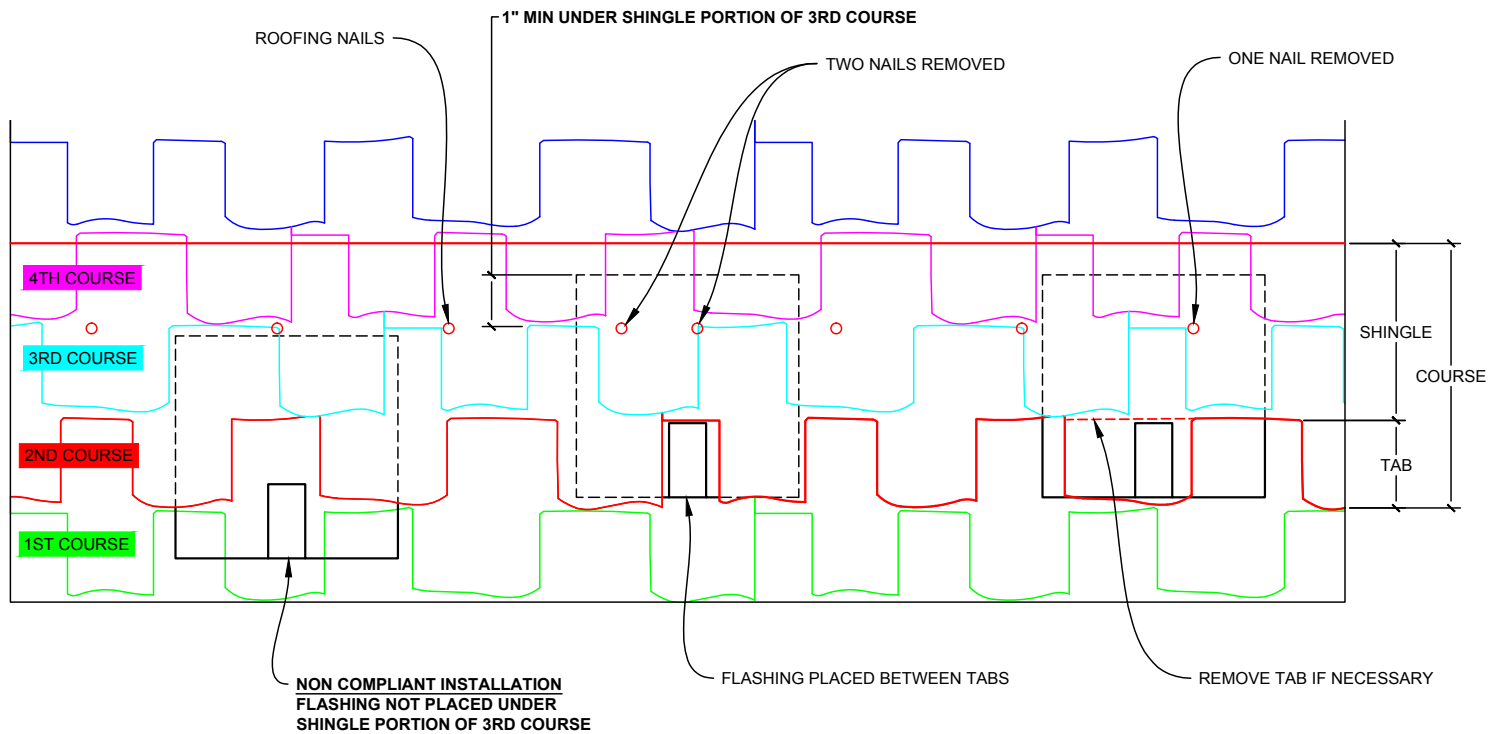

INSTRUCTIONS

- 1) Place flashing under shingle portion of 2nd course. It may be necessary to pry up shingles with a breaker bar and remove roofing nails.
- 2) Flashing must extend a minimum of 1" under shingle portion of 3rd course.

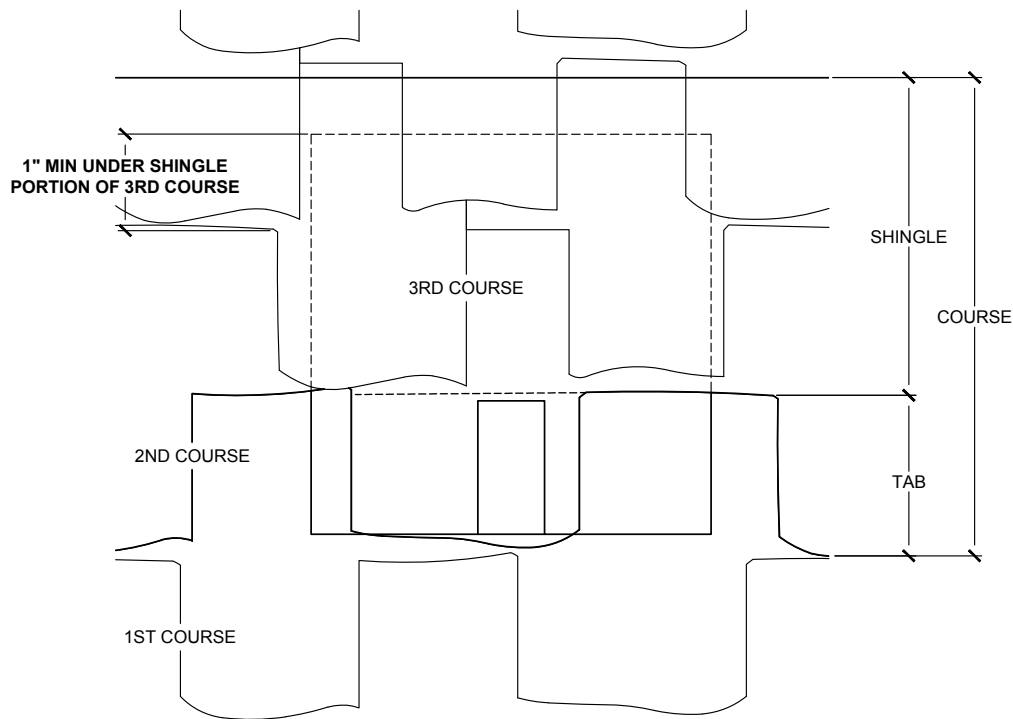

- 3) Remove tab of 2nd course if required. Using a shingle knife, cut partially through tab taking care not to damage the 1st course of composition. Then break off the tab.

