




REVISION:			
G	11/28/2017	UPDATES	DR

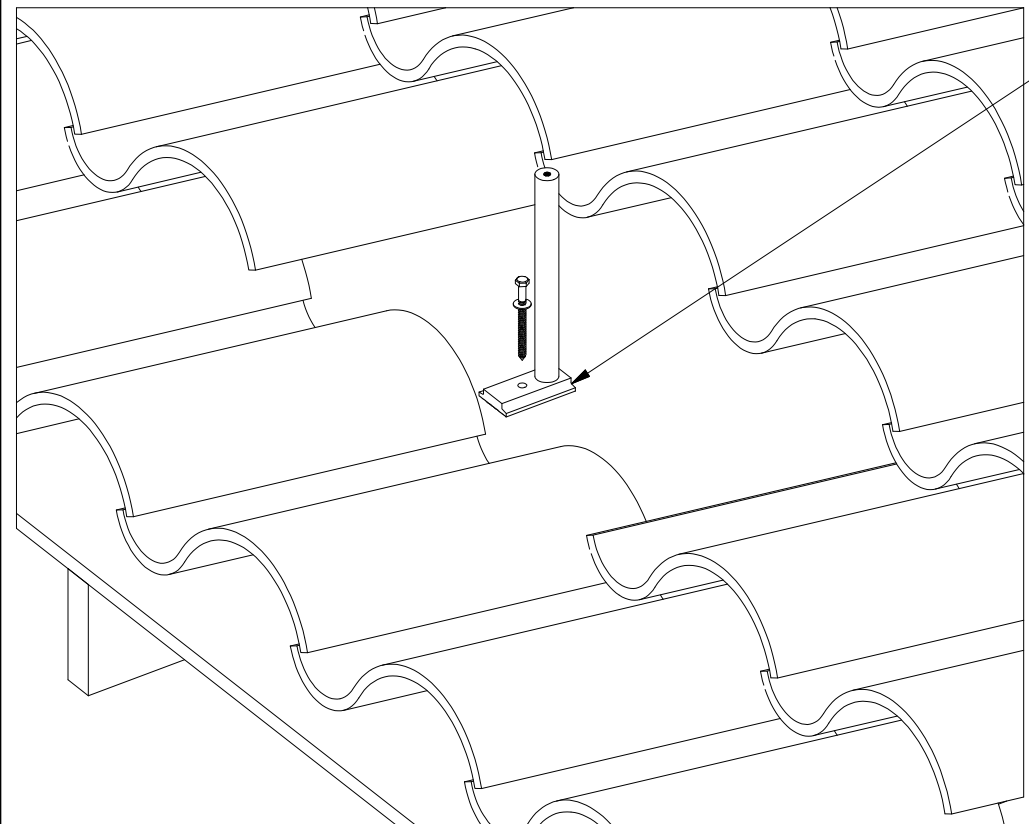

STEP 1:
REMOVE TILE AND IDENTIFY
RAFTER LOCATION WITH A
PILOT DRILL. MOUNT STANDOFF
ASSEMBLY TO ROOF SHEATHING
WITH A 5/16"Ø LAG SCREW
MINIMUM 2 1/2" EMBEDMENT TYP.
BE SURE LAG SCREW IS FULLY
SEATED

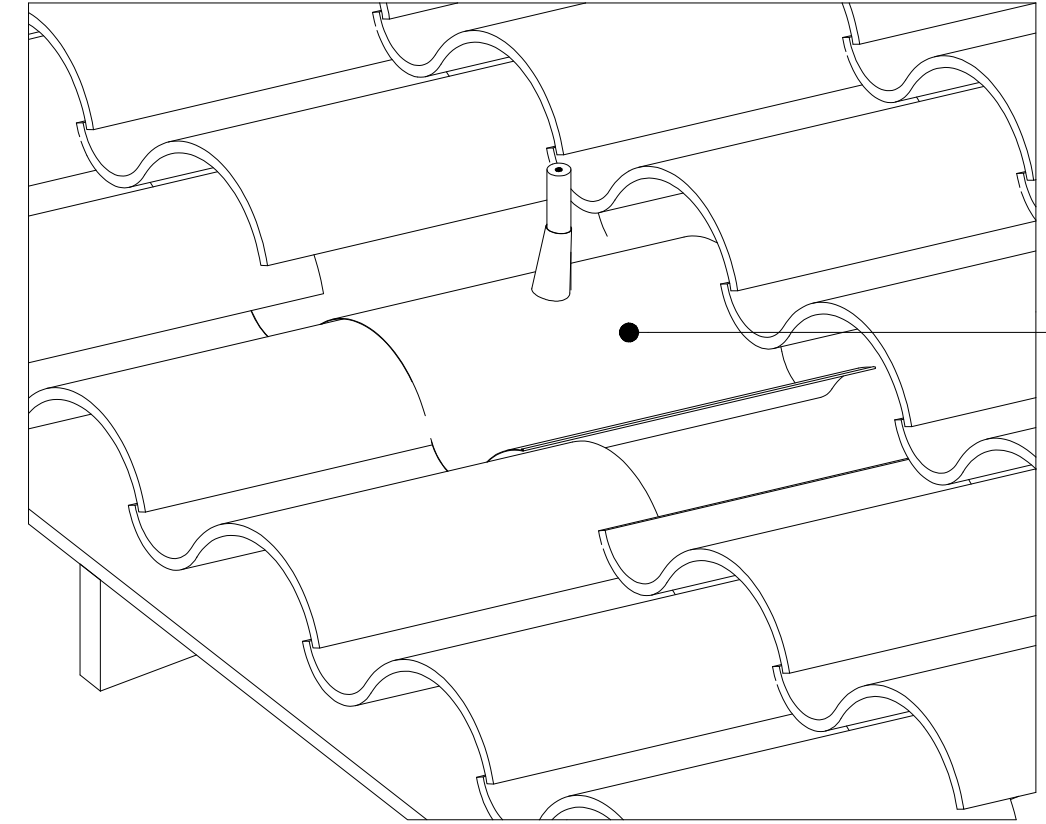

STEP 2:
SLIDE FLASHING OVER POST,
UNDER UPPER LAYER OF TILE,
AND FORM FLASHING TO
MATCH CONTOUR OF TILES

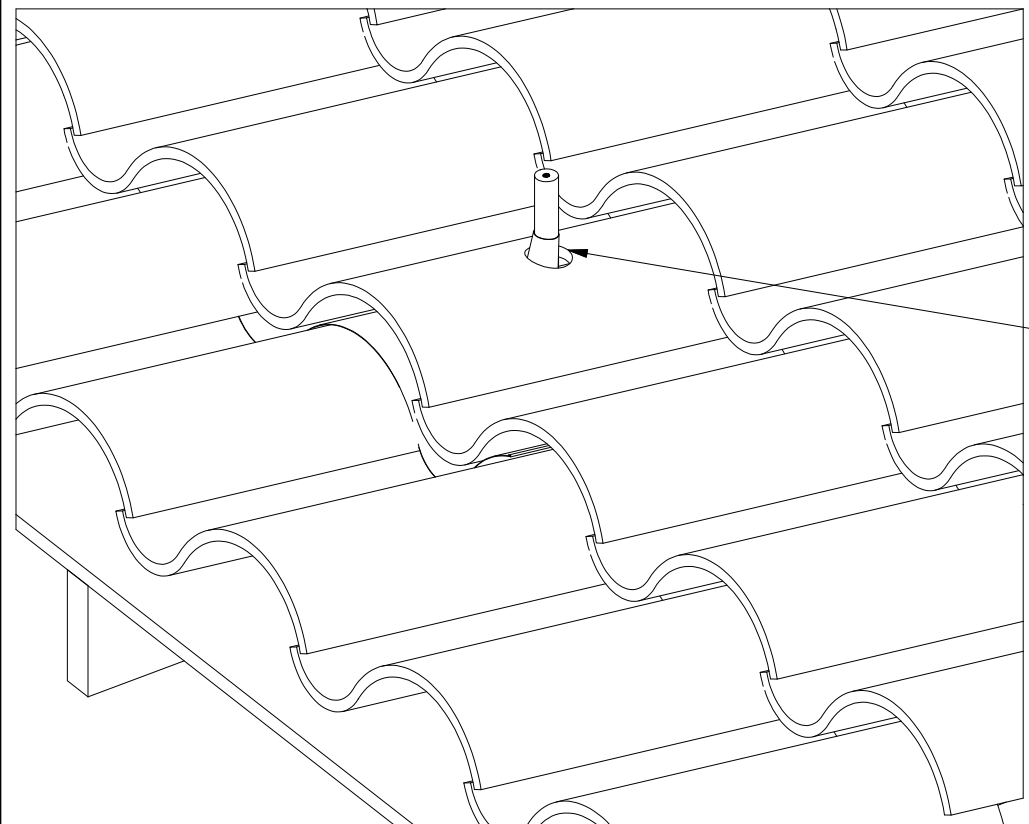

STEP 3:
USE CORING BIT OR
OTHER METHOD TO
DRILL 2 1/2"Ø CLEARANCE
HOLE IN TILE TO ALLOW
TILE TO BE REPLACED IN
ORIGINAL LOCATION

