


UTILITIZE A 1/4"Ø TEK SCREW FOR METAL MEMBERS OR A 5/16"Ø LAG SCREW INTO WOODEN RAFTERS.

REVISION:		
F	11/30/2013	DR
G	11/28/2017	ECF

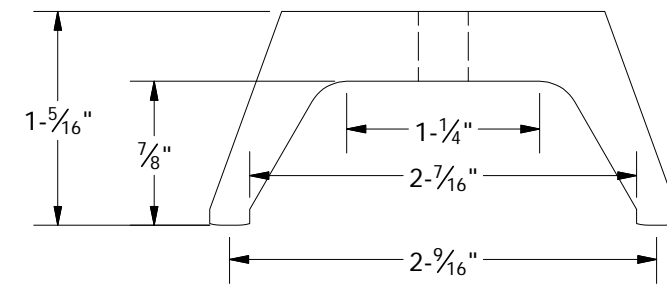

PART DIMENSIONS

